

# Documentation

HiPath 8000

OpenStage 15

Quick Reference Guide




Communication for the open minded

Siemens Enterprise Communications  
[www.siemens-enterprise.com](http://www.siemens-enterprise.com)

**SIEMENS**

# Operating your phone

## Key field

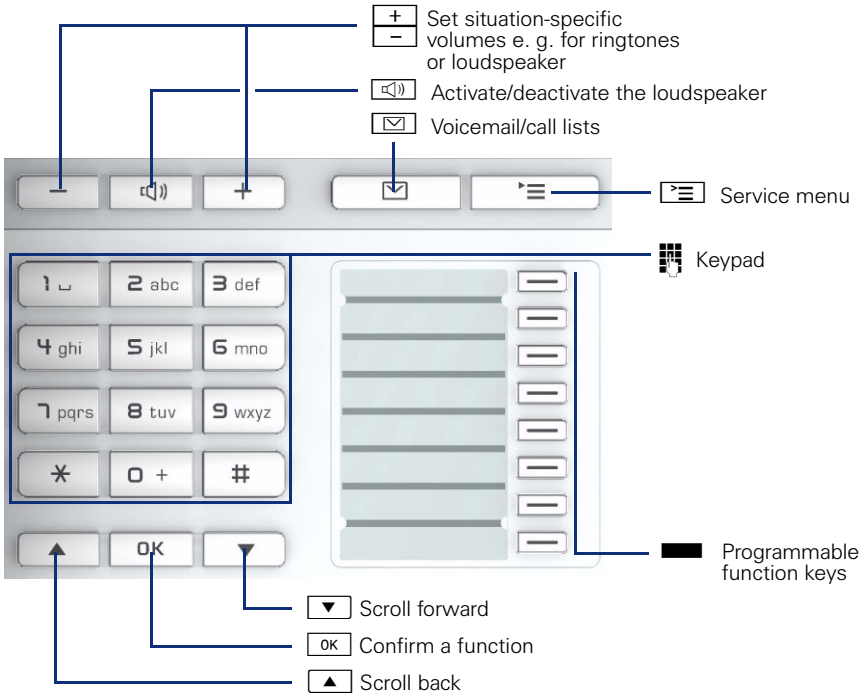

## Keypad

In cases where text input is possible, you can use the keypad to input text, punctuation and special characters. To do this, press the numerical keys repeatedly.

Additional functions on the asterisk and hash keys:

| Key        | Function during text input                            | Function when held down      |
|------------|---|------------------------------|
| <b>* Δ</b> | Write special characters.                             | Deactivate the ring tone     |
| <b># ↔</b> | Switch between upper and lower case and number entry. | Activate the telephone lock. |

## Display

|       |              |                                |
|-------|--------------|--------------------------------|
| 13:15 | Sat 27.07.07 | Time and date                  |
| 2222  | HiPath 8000  | Own phone number and menu icon |

|       |          |                               |
|-------|----------|-------------------------------|
| 13:15 | 27.07.07 | Time and date                 |
| (= 1  |          | A new entry in the call lists |

## Important operating procedures

- |   |  |
|---|--|
|  Lift the handset    |  Enter the text or number   |
|  Replace the handset |  Selecting an entry         |
|  Conduct call        |  Ringtone/call waiting tone |
|  Next operating step |  |

### In idle mode

#### Answering a call via the handset



#### Accepting a call in speakerphone mode



 
#### Rejecting a call



 
#### Deflecting a call



 
#### Dialing from the caller list




#### Activating callback



 
#### Redialing a number



#### Programming call forwarding

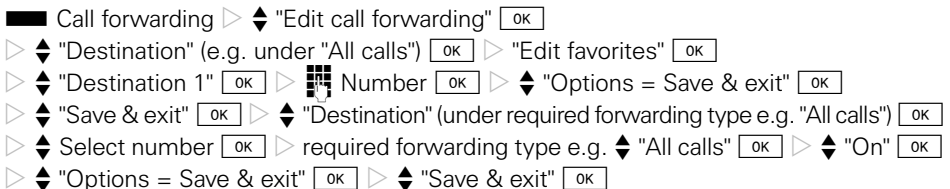

 


 


#### Activating/deactivating call forwarding for all calls



### During a call with station A

 


 


 


---

#### Switching to speakerphone mode

 Hold down   (only for USA:   )

---

#### Consultation

◆ "Consultation"    Station number B    Station B  
▷ ◆ "Disconnect & return"    Station A

---

#### Accepting call waiting

 Call waiting tone ▷ ◆ "Accept"    Station B ▷ ◆ "Disconnect & return"   
▷  Station A

 


 


 


---

#### Forwarding a call on call waiting

 Call waiting tone ▷ ◆ "Deflect"    Station B number    Station A

---

#### Start conference

"Consultation"    Station B number    Station B  
▷ ◆ "Conference"    Station A and B

---

#### Start conference with call waiting

 Call waiting tone ▷ ◆ "Accept"    Station B ▷ ◆ "Conference"   
▷  Station A and B

 


 



---

#### Transferring a call with station B without consultation

◆ "Consultation"    Destination number   

---

#### Transferring a call after consultation

◆ "Consultation"    Station B number    Station B ▷ 

## Communication for the open minded

**Siemens Enterprise Communications**  
**[www.siemens-enterprise.com](http://www.siemens-enterprise.com)**

Copyright © Siemens Enterprise  
Communications GmbH & Co. KG  
Hofmannstr. 51  
80200 München  
Deutschland

Siemens Enterprise  
Communications GmbH & Co. KG  
is a Trademark Licensee of Siemens AG

Reference No:  
A31003-S2000-U137-2-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract. Availability and technical specifications are subject to change without notice. OpenScape, OpenStage and HiPath are registered trademarks of Siemens Enterprise Communications GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.